


Coax Probe Replacement Instructions:

Rev 1


Signal Probe Removal:



Pull under probe head with tweezers.

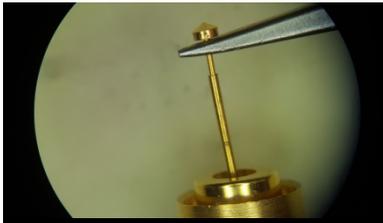

Pull probe out vertically.

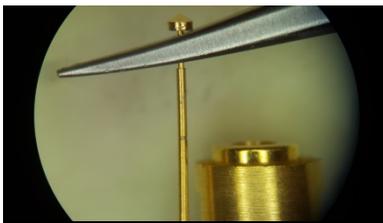


Dispose of used signal probe.

Signal Probe Installation:



Under microscope, locate the hole in the plastic Insulator.

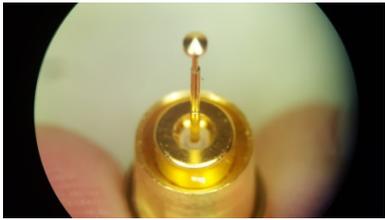

Insert new signal probe, barrel side first.



Bottom out the probe with tweezers.



The new probe is now ready to use.